## **LED and Beeper Indications**

The reader's beeper sounds and its LED illuminates to indicate various functions or errors on the reader. An optional 'Green Spot" also performs useful functions. The following tables list these indications. One exception to the behaviors listed in the tables is that the reader's functions are programmable, and so may or may not be turned on. For example, certain indications such as the power-up beep can be disabled using programming bar code labels.

Indicator	Description	LED	Beeper
Power-up Beep	The reader is in the process of powering-up.		Reader beeps four times at highest fre- quency and vol- ume upon power-up.
Good Read Beep	A label has been successfully scanned by the reader.	LED behavior for this indica- tion is configu- rable via the feature 'Good Read: When to Indicate" (see the PRG for information.)	The reader will beep once at current frequency, volume, mono/bitonal setting and duration upon a successful label scan.
ROM Failure	There is an error in the reader's software/pro- gramming	Flashes	Reader sounds one error beep at highest vol- ume.
Limited Scan- ning Label Read	Indicates that a host connection is not estab- lished.	N/A	Reader 'chirps' six times at the highest fre- quency and current volume.
Reader Active Mode	The reader is active and ready to scan.	The LED is lit steadily <sup>a</sup>	N/A

Indicator	Description	LED	Beeper
Reader Disabled	The reader has been disabled by the host.	The LED blinks continuously	N/A
Green Spot <sup>a</sup> flashes momentarily	Upon success- ful read of a label, the soft- ware shall turn the green spot on for the time specified by the configured value.	N/A	N/A
Image Cap- ture	When ready to capture image	Blue light flashes 2 times when updating	N/A

<sup>&</sup>lt;sup>a</sup>Except when in sleep mode or when a Good Read LED Duration other than 00 is selected

**Programming Mode**-The following indications ONLY occur when the reader is in Programming Mode.

INDICATION	DESCRIPTION	LED	BEEPER
Label Pro- gramming Mode Entry	A valid program- ming label has been scanned.	LED blinks continuously	Reader sounds four low fre- quency beeps.
Label Pro- gramming Mode Rejec- tion of Label	A label has been rejected.	N/A	Reader sounds three times at lowest fre- quency and current vol- ume.
Label Pro- gramming Mode Accep- tance of Par- tial Label	In cases where multiple labels must be scanned to program one feature, this indication acknowledges each portion as it is successfully scanned.	N/A	Reader sounds one short beep at highest fre- quency and current vol- ume.
Label Pro- gramming Mode Accep- tance of Pro- gramming	Configuration option(s) have been successfully programmed via labels and the reader has exited Programming Mode.	N/A	Reader sounds one high fre- quency beep and 4 low fre- quency beeps followed by reset beeps.
Label Pro- gramming Mode Cancel Item Entry	Cancel label has been scanned.	N/A	Reader sounds two times at low frequency and current volume.