 
 


# OVERVIEW

## Instrument panel

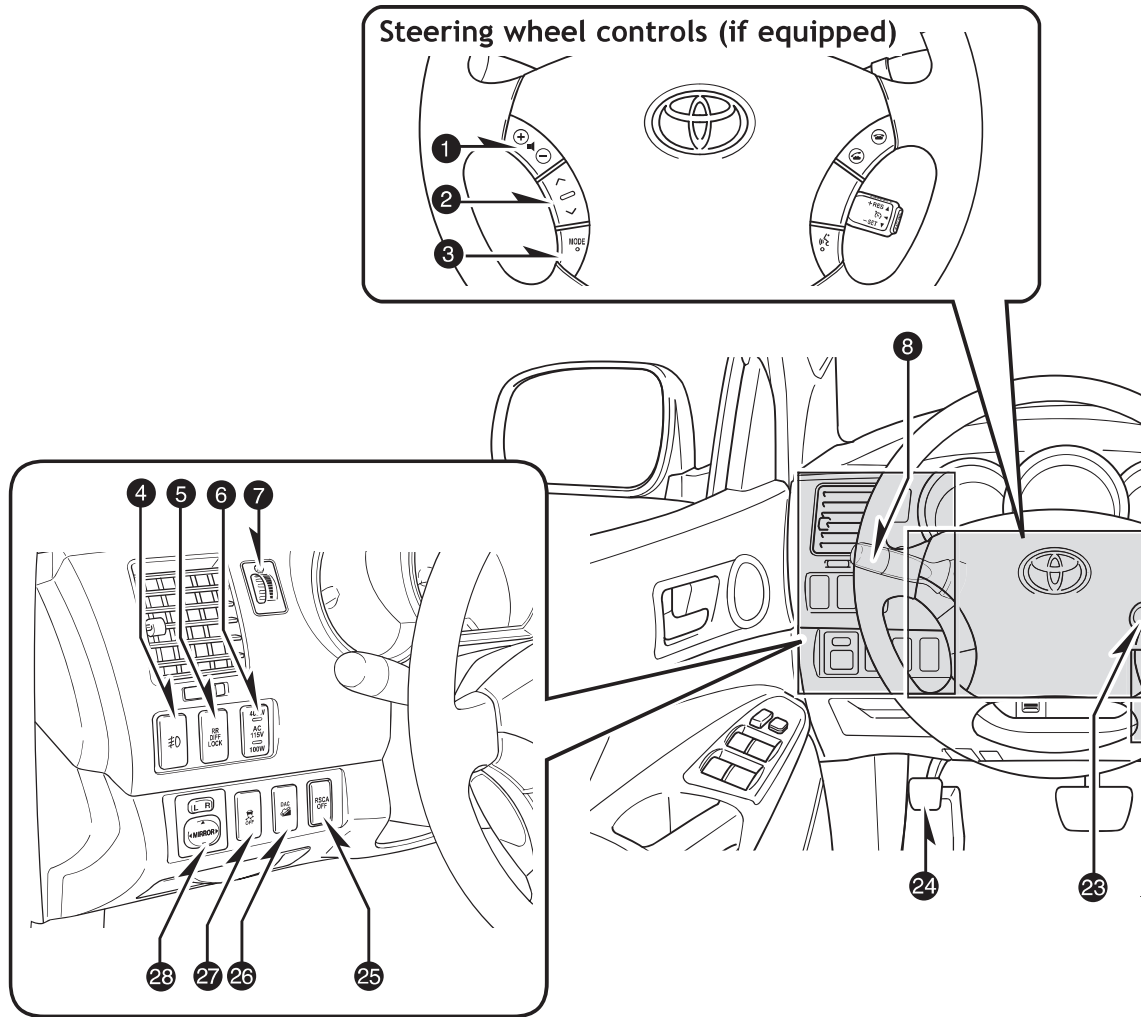

- 1 Volume control buttons (for audio)
- 2 " ^ v " buttons (for audio)
- 3 "MODE" button (for audio)
- 4 Front fog light switch<sup>1</sup>
- 5 Rear differential lock switch<sup>1</sup>
- 6 115V AC Power outlet ON/OFF switch<sup>1</sup>
- 7 Instrument panel light control
- 8 Headlight and turn signal controls
- 9 Windshield wiper and washer controls
- 10 Two-wheel/Four-wheel drive selector<sup>1</sup>
- 11 Audio system
- 12 Clock
- 13 Theft deterrent system/Engine immobilizer indicator<sup>1</sup>
- 14 Front passenger seat belt reminder
- 15 Front passenger occupant classification indicator or front passenger airbag ON/OFF indicator<sup>1</sup>

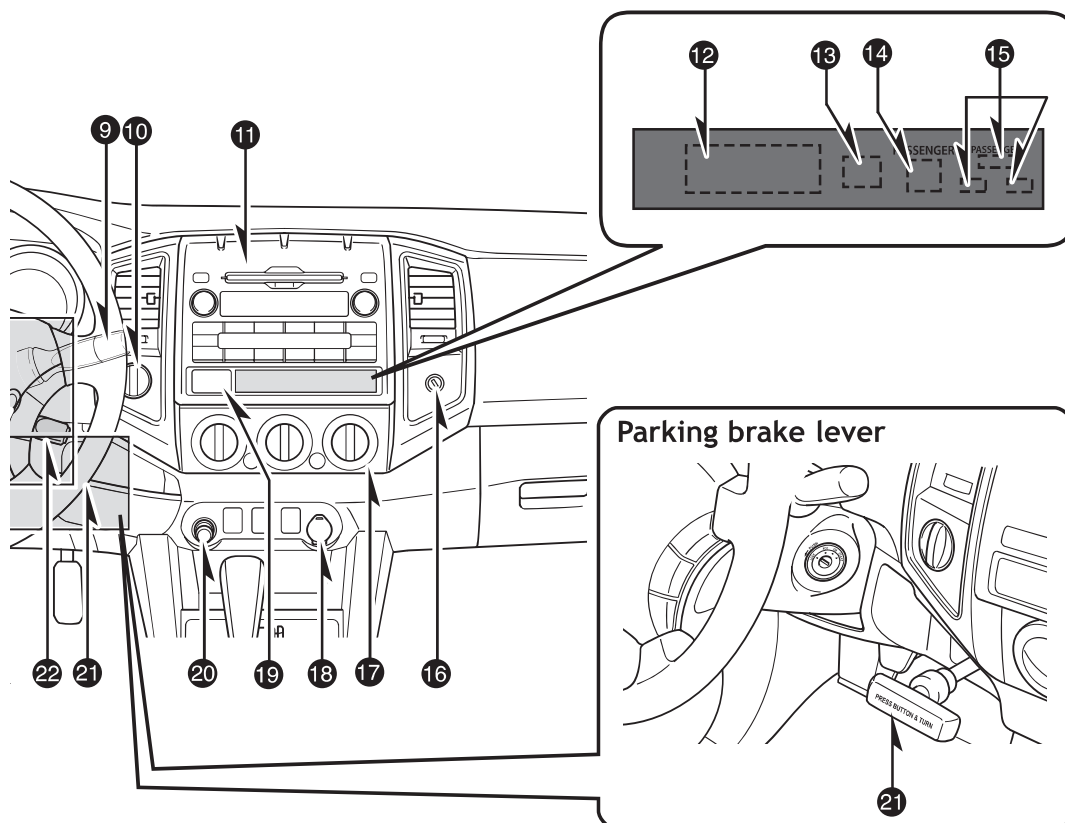

 
- 16 Front passenger airbag manual ON/OFF switch<sup>1</sup>
- 17 Air Conditioning controls
- 18 12V DC Power outlet
- 19 Emergency flasher button
- 20 Cigarette lighter
- 21 Parking brake lever<sup>2</sup>
- 22 Cruise control<sup>1</sup>
- 23 Ignition switch
- 24 Parking brake pedal<sup>3</sup>
- 25 "RSCA OFF" (Roll Sensing Curtain shield Airbags OFF) switch
- 26 "DAC" (Downhill Assist Control) button<sup>1</sup> or clutch start cancel switch<sup>1</sup>
- 27 "VSC OFF" (Vehicle Stability Control OFF) switch
- 28 Power rearview mirror control switches<sup>1</sup>

<sup>1</sup> If equipped

<sup>2</sup> Manual Transmission only

<sup>3</sup> Automatic Transmission only

## Instrument cluster

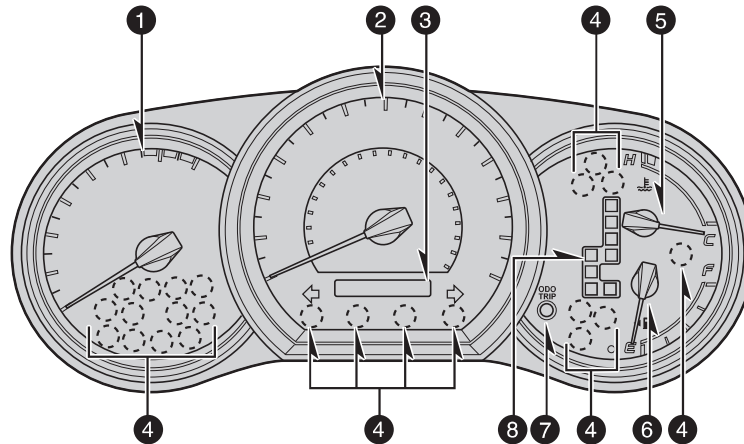

- ① Tachometer
- ② Speedometer
- ③ Odometer and two trip meters
- ④ Service indicator and reminder
- ⑤ Engine coolant temperature
- ⑥ Fuel gauge
- ⑦ Odometer/trip meter and trip meter reset button
- ⑧ Gear shift position indicator (if equipped)

## Indicator symbols










 











For details, refer to "Indicators and warning lights," Section 2-2, 2011 Owner's Manual.

	Brake system warning <sup>1</sup>
	Driver/Front passenger seat belt reminder
	Charging system warning <sup>1</sup>
	Front passenger occupant classification indicator/ Front passenger airbag ON/OFF indicator
	Low engine oil pressure warning <sup>1</sup>
	Malfunction/Check Engine indicator <sup>1</sup>
	Engine oil replacement reminder <sup>1</sup>

<sup>1</sup> If indicator does not turn off within a few seconds of starting engine, there may be a malfunction. Have vehicle inspected by your Toyota dealer.

<sup>2</sup> If this light flashes, refer to "SRS airbag," Section 1-7-, 2011 Owner's Manual.

<sup>3</sup> If this light flashes, refer to "Four-wheel drive system," Section 2-4, 2011 Owner's Manual.


	Open door warning
	Airbag SRS warning <sup>1</sup>
	Automatic Transmission fluid temperature warning <sup>1</sup>
	Low Tire Pressure Warning <sup>1</sup>
	Theft deterrent/Engine immobilizer system indicator
	Roll Sensing Curtain shield Airbags OFF indicator <sup>1,2</sup>
	Headlight low beam indicator
	Headlight high beam indicator
	Turn signal indicator
	Automatic Transmission indicator (5-speed)/(4-speed)
	Four-wheel drive indicator <sup>3</sup>
	Low speed four-wheel drive indicator <sup>3</sup>
	Rear differential lock indicator <sup>1,4</sup>
	Slip indicator <sup>1</sup>
	Vehicle Stability Control OFF indicator <sup>1</sup>
	Active traction control system indicator <sup>1</sup>
	Downhill assist control system indicator <sup>1</sup>
	AUTO Limited Slip Differential indicator <sup>1</sup>
	Cruise control indicator <sup>5</sup>
	Low fuel level warning
	Anti-lock Brake System warning <sup>1</sup>

<sup>4</sup> If this light flashes, refer to "Rear differential lock system," Section 2-4, 2011 Owner's Manual.


<sup>5</sup> If this light flashes, refer to "Cruise control," Section 2-4, 2011 Owner's Manual.

## Keyless entry (if equipped)

 
### Locking operation

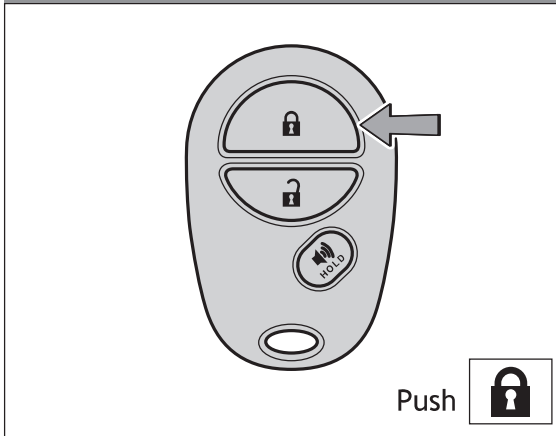


### Unlocking operation

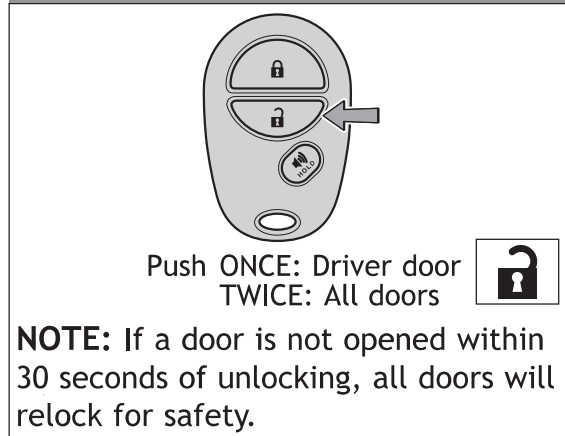 


### Panic button

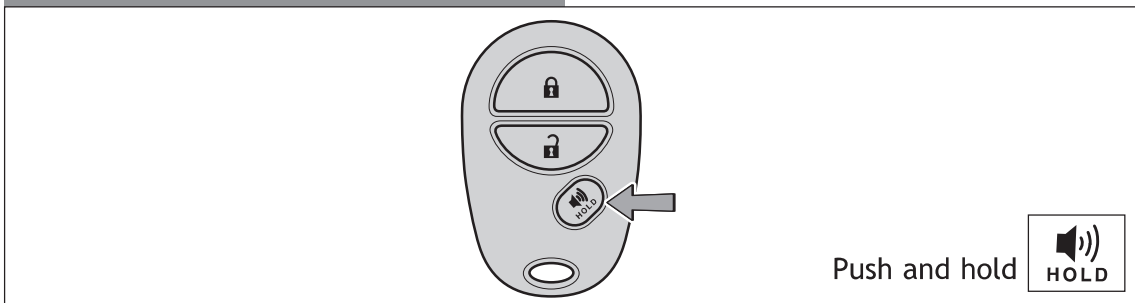 

## Fuel tank door and cap

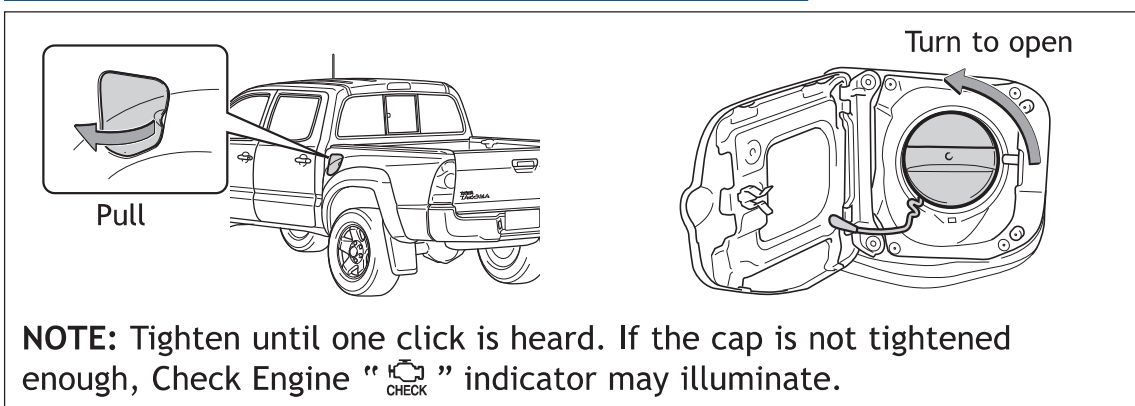 


## Hood release

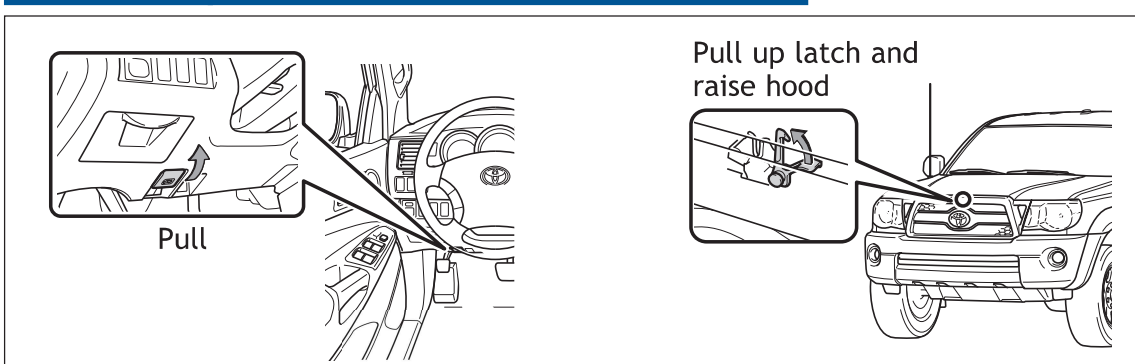 


## Engine maintenance
 
### 4 cylinder (2TR-FE) engine

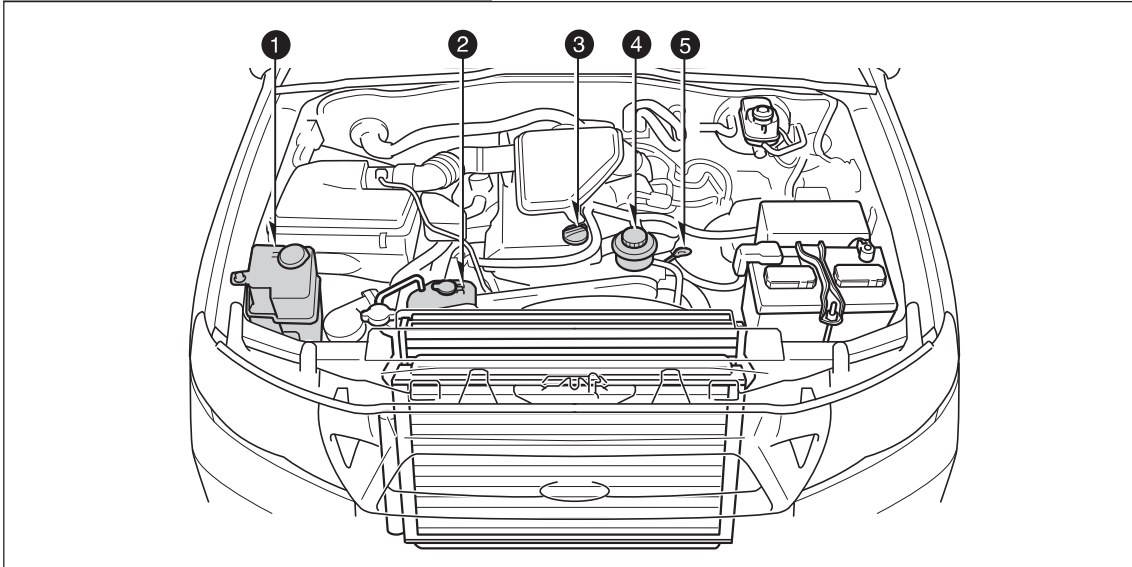

### 6 cylinder (1GR-FE) engine

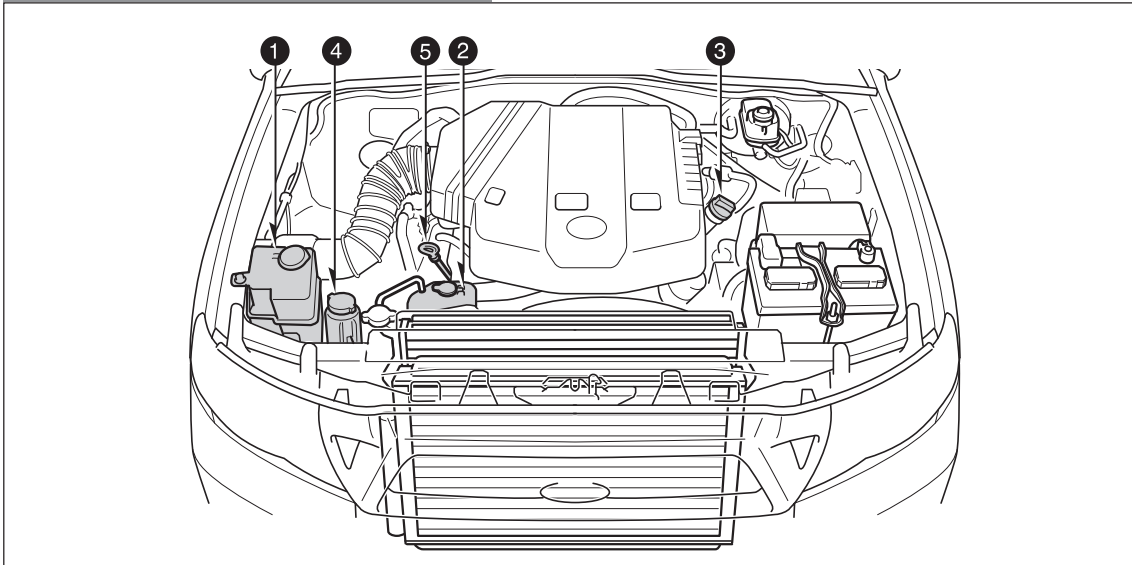 


- ❶ Windshield washer fluid tank
- ❷ Engine coolant reservoir
- ❸ Engine oil filler cap
- ❹ Power steering fluid reservoir
- ❺ Engine oil level dipstick

**NOTE:** Regularly scheduled maintenance, including oil changes, will help extend the life of your vehicle and maintain performance. Please refer to the "Warranty Maintenance Guide."


# FEATURES/OPERATIONS
 
## Automatic Transmission (if equipped)

### 5-speed models

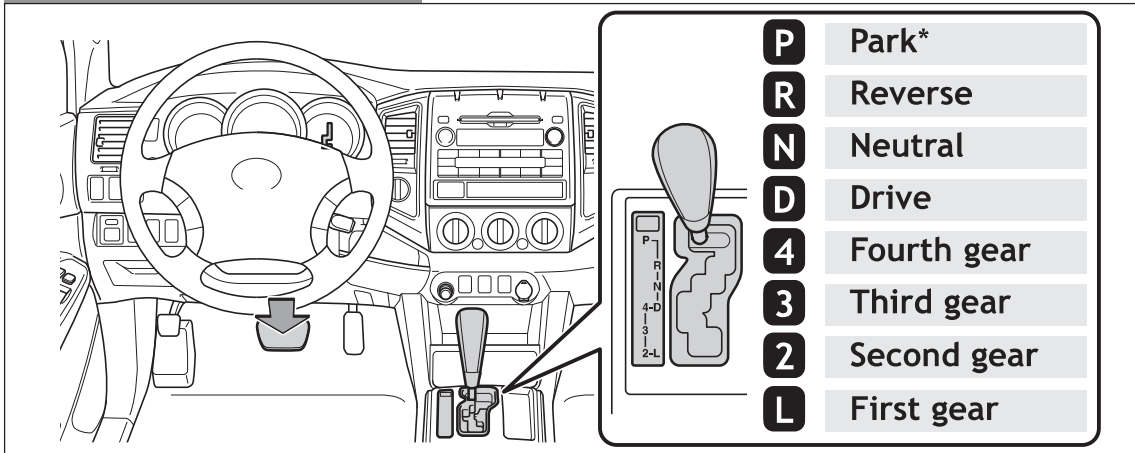


### 4-speed models

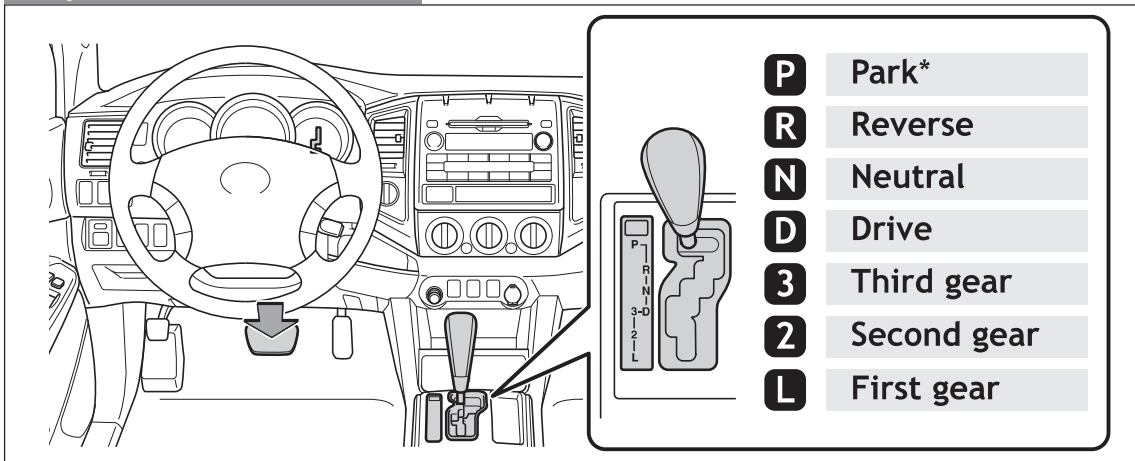 

\* The engine switch must be "ON" and the brake pedal depressed to shift from Park.


Downshifting increases power going uphill, or provides engine braking downhill. For best fuel economy during normal driving conditions, always drive with the shift lever in the "D" position.

## Light control-Instrument panel

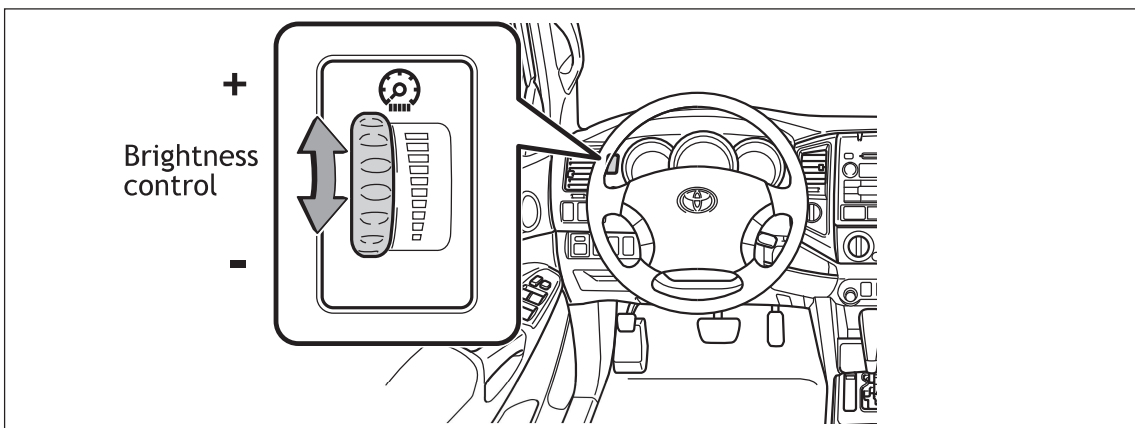 



## Four-wheel drive (if equipped)

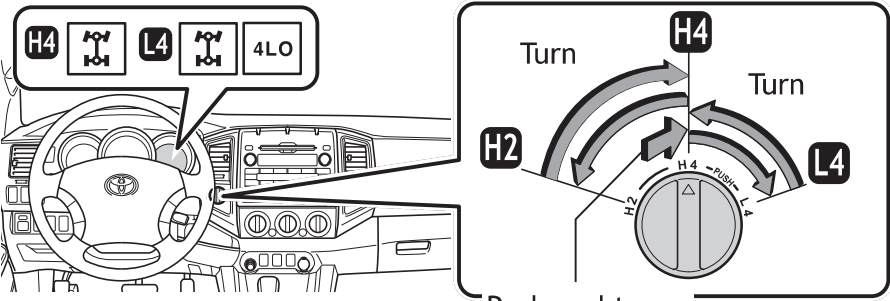 


**H2** High speed (2WD)

**H4** High speed (4WD)  
Shift when speed is below 62 mph.

**L4** Low speed (4WD)  
Shift into neutral while stopped, or depress clutch pedal at speeds below 2 mph.

For best fuel economy and performance under normal driving conditions, keep in "H2" position.

## Tilt and telescopic steering wheel

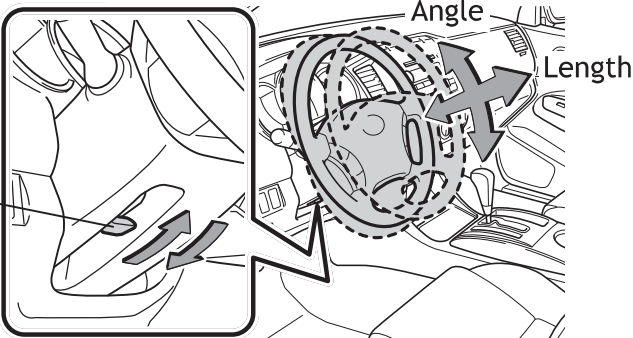 

Lock release lever


Angle

Length

Hold wheel, push lever down, set angle and length, and return lever.

**NOTE:** Do not attempt to adjust while the vehicle is in motion.

## Clock

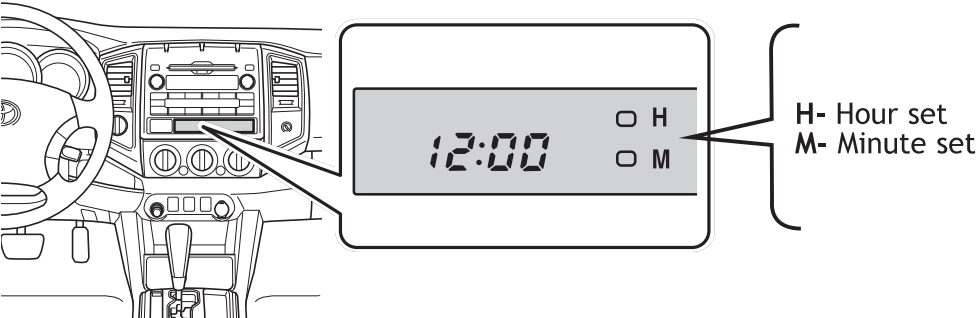 


H- Hour set  
M- Minute set




## Parking brake

 
### Automatic Transmission

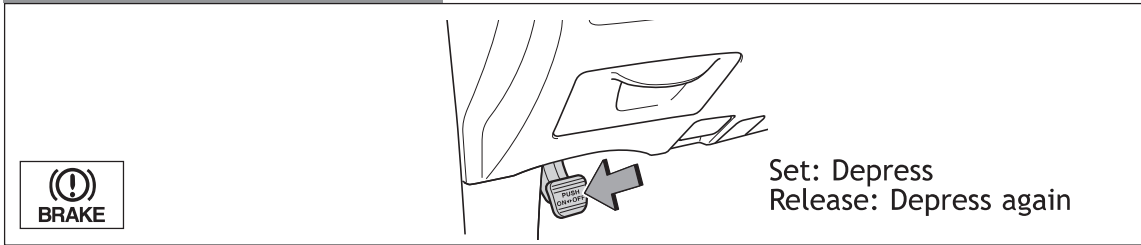

### Manual Transmission

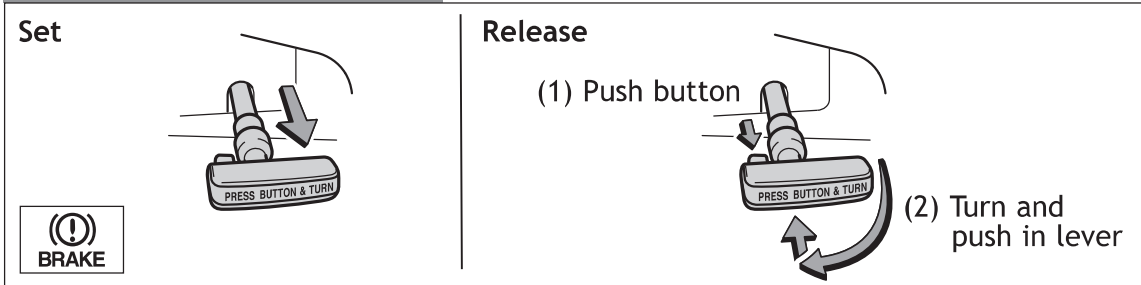 


## Seats-Head restraints

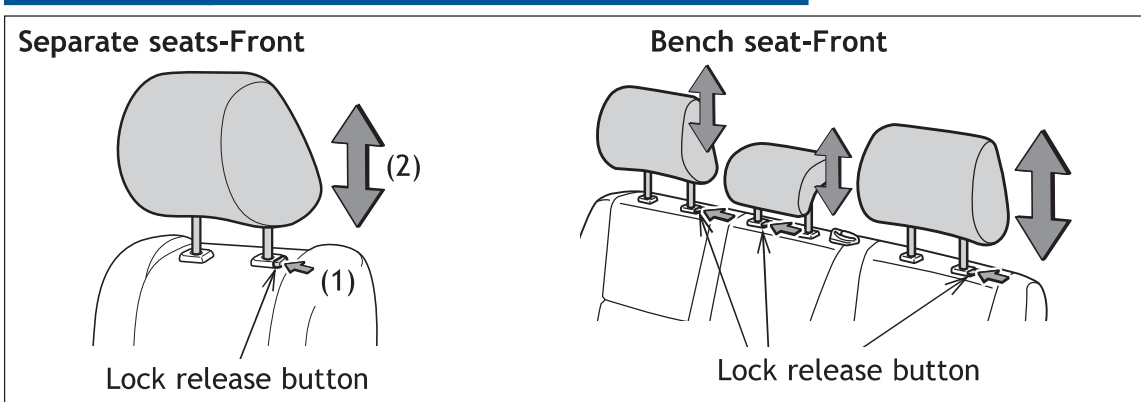 


## Seat adjustments-Front
 
### Separate seat

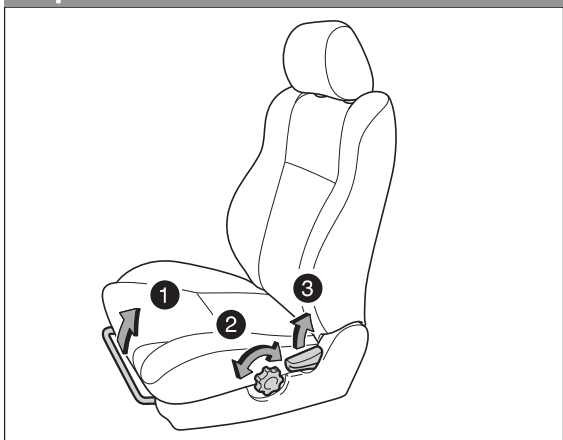


### Bench seat

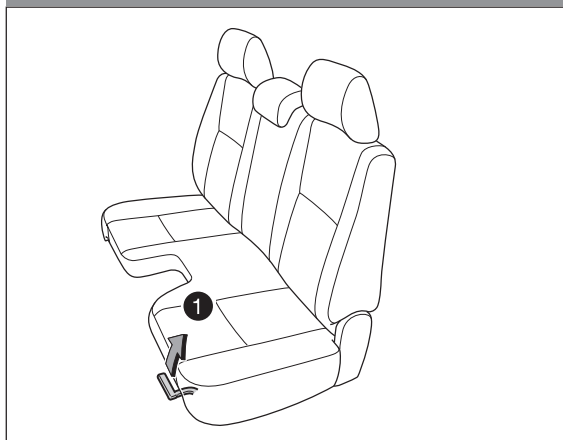 


- 1 Seat position (forward/backward)
- 2 Driver's seat lumbar support (if equipped)
- 3 Seatback angle

## Seats-Folding rear
 
### Access cab

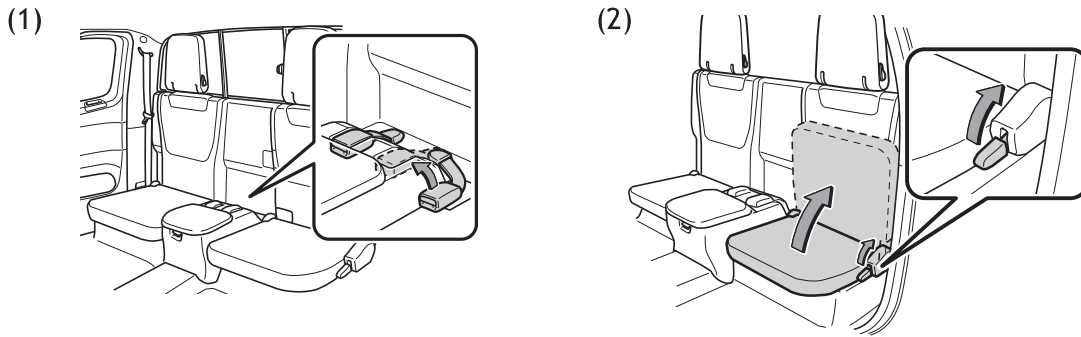


### Double cab

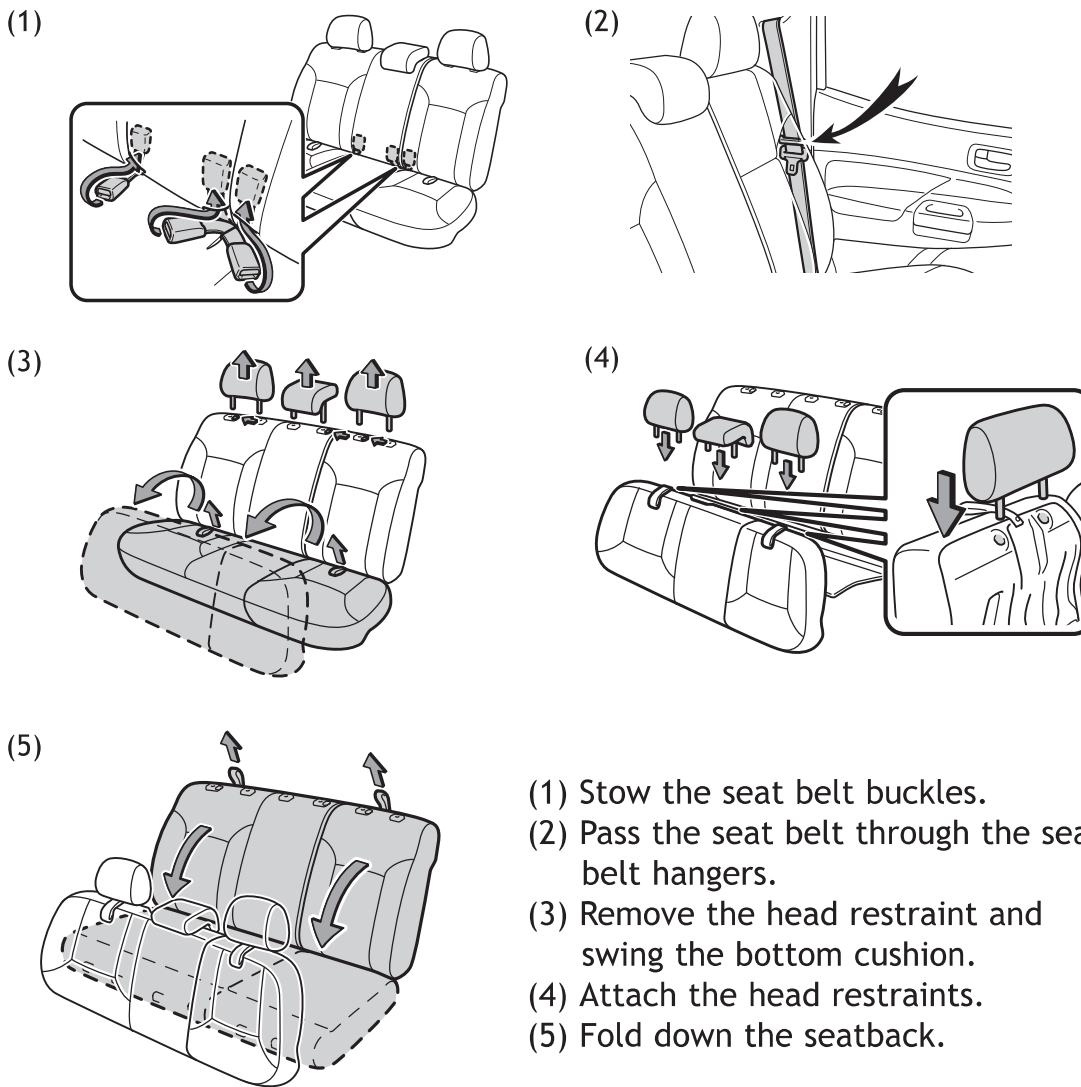 

## Lights & turn signals
 
### Headlights

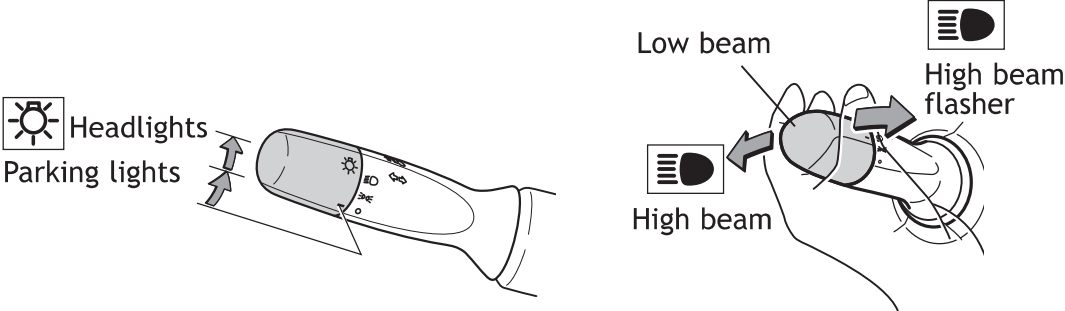

Low beam

High beam

High beam flasher


Headlights

Parking lights

-Daytime Running Light system (if equipped) Automatically turns on the front turn signal lights at a reduced intensity.


-Automatic light cutoff system Automatically turns lights off when driver's door is opened with the engine switch in the "ACC" or "LOCK" position.

### Front fog lights (if equipped)

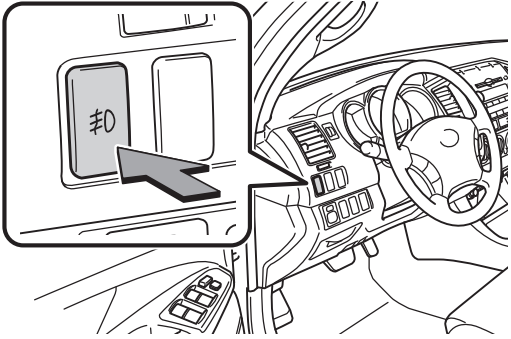 

Front fog lights come on only when the headlights are on low beam.

### Turn signals

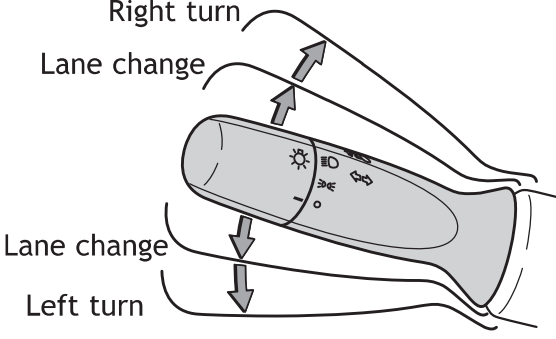 


Right turn


Lane change

Lane change

 Left turn



## Windows-Power (if equipped)

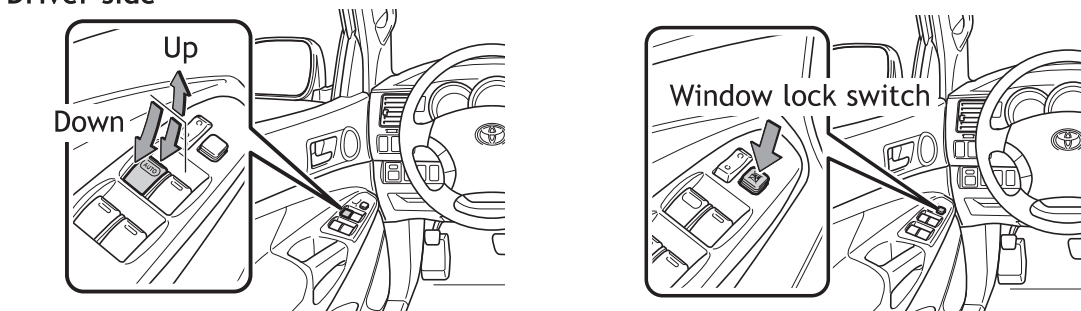 

Driver side

Up

Down

Window lock switch


**Automatic down operation (driver side only)**  
 Push the switch completely down and release to fully open. To stop window midway, lightly pull up on the switch.

**Window lock switch** Deactivates all passenger windows. Driver's window remains operable.


## Windshield wipers & washers
 
### With intermittent wiper

**\* Intermittent windshield wiper frequency adjustment**  
Rotate to increase/decrease wiper frequency.

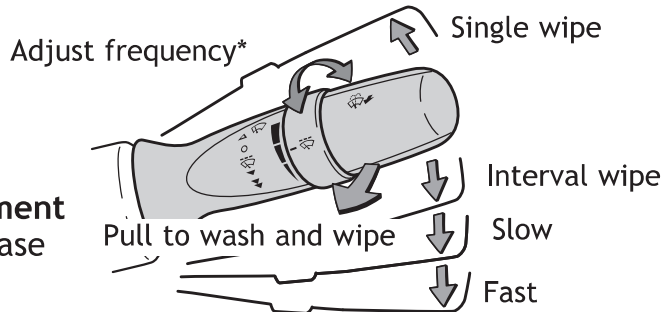


### Without intermittent wiper

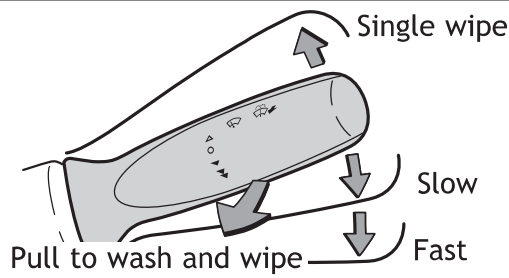 


## Cruise control (if equipped)
 
### Turning system ON/OFF

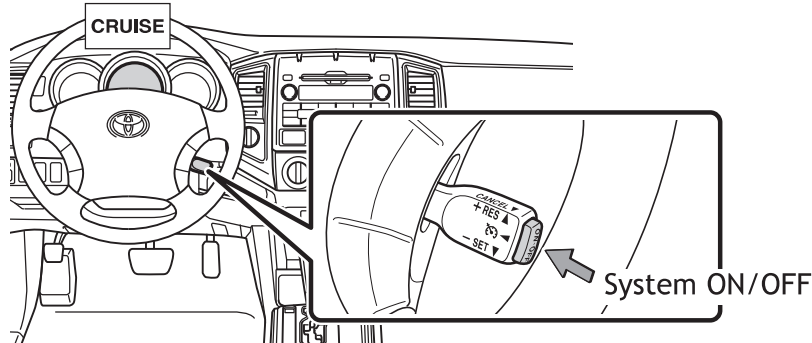

### Functions

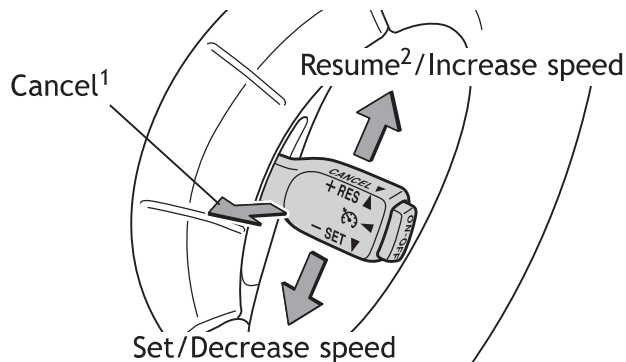 


<sup>1</sup> The set speed may also be cancelled by depressing the brake pedal.


<sup>2</sup> The set speed may be resumed once vehicle speed exceeds 25 mph.

**Audio**

 **Type 1**

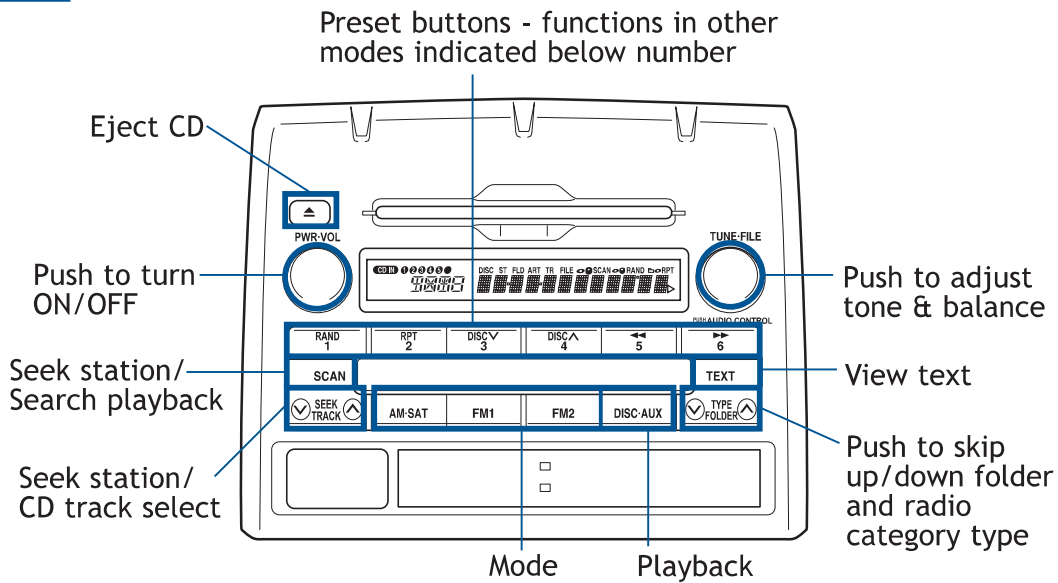

**Type 2 additional functions**

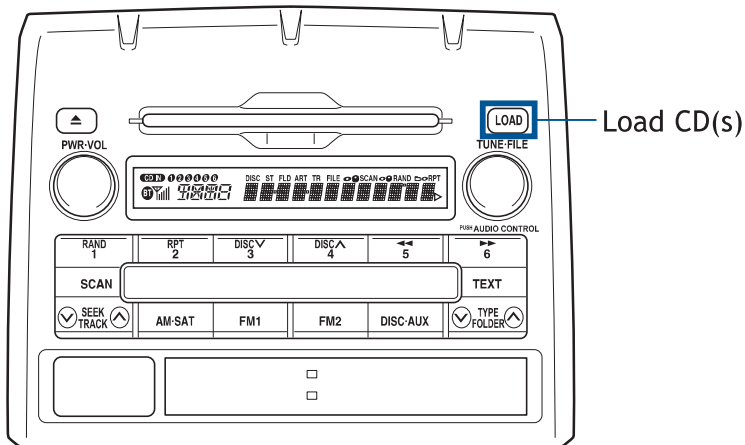 

**CD PLAYER**

To scan tracks on a disc Push "SCAN." Push again to hold selection.

**CD changer (Type 2 only)**

 
- To load one disc Push "LOAD" and insert one disc.
- To load multiple discs Push and hold "LOAD" until you hear a beep. Insert one disc. Shutter will close and then re-open for next disc.

**RADIO**

To preset stations Tune in the desired station and hold down a preset button (1-6) until you hear a beep. Push desired preset button (1-6) to select.

To scan stations Push and hold "SCAN" to scan preset stations. Push again to hold selection.

## Steering wheel switches (if equipped)

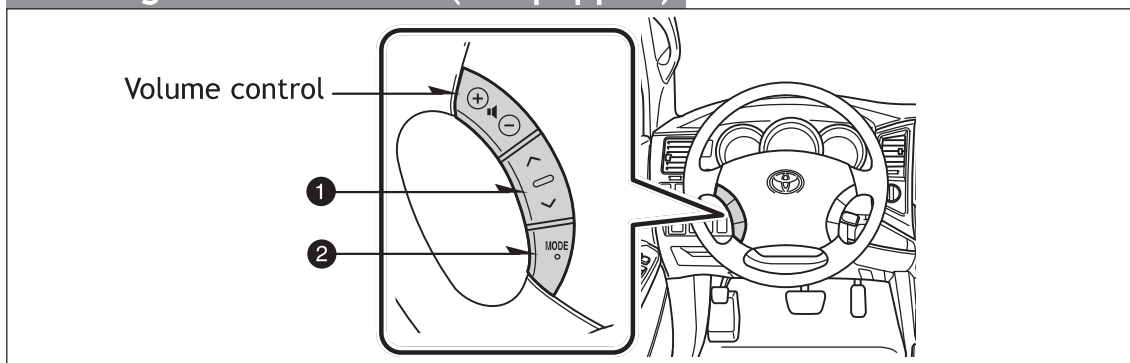


### 1 "Λ V"

Use to search within the selected audio medium (radio, CD, iPod, etc.).

### 2 "MODE"


Push to turn audio ON and select an audio mode. Push and hold to turn the audio system OFF.
 
## AUX audio jack

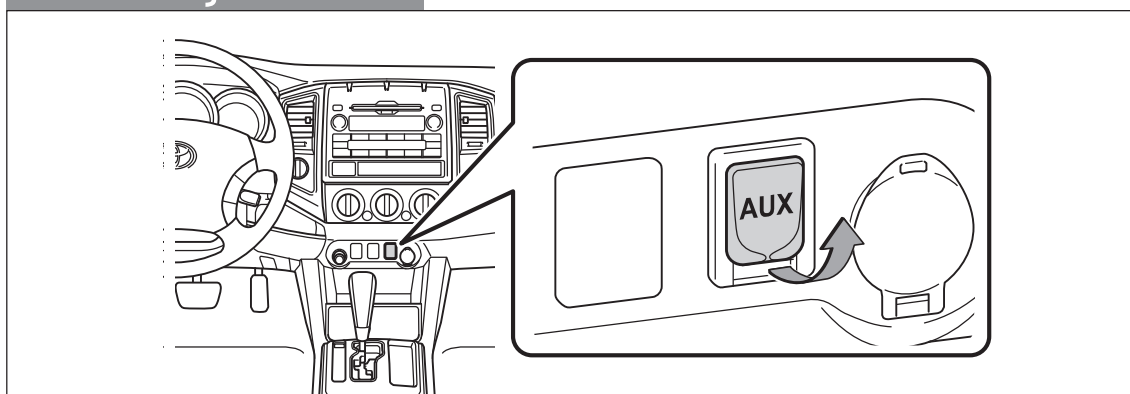

Push "DISC·AUX" button after inserting a mini plug into the AUX audio jack to listen to music from a portable audio device through the vehicle's speaker system while in AUX mode.


## Accessory meter (if equipped)

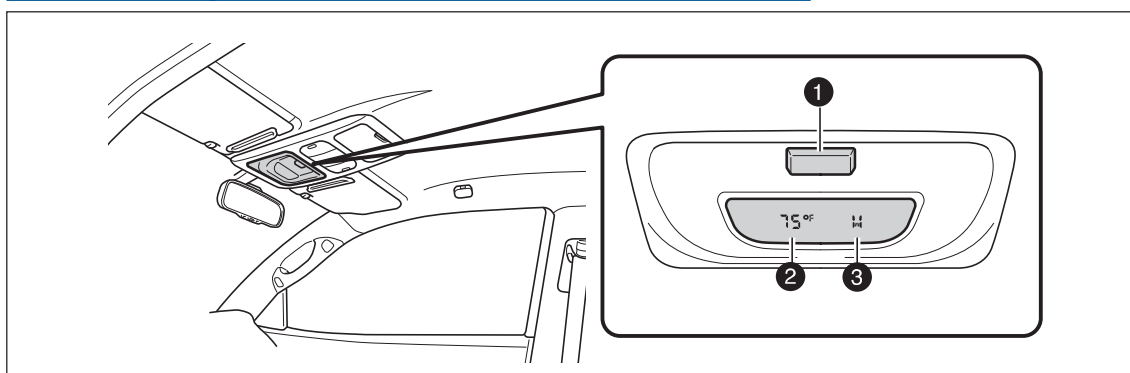 

- 1 Display button
- 2 Outside temperature
- 3 Compass




## Air Conditioning/Heating

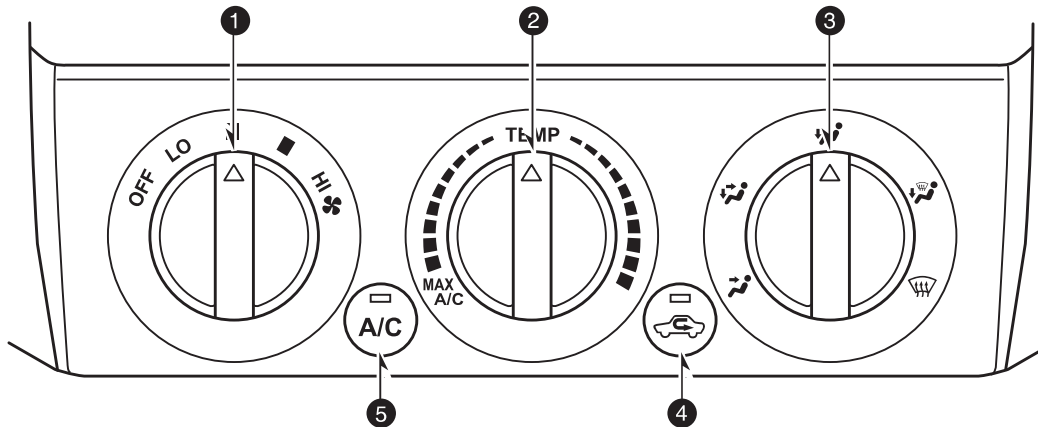 

- ① Fan speed
- ② Temperature selector
- ③ Airflow vent  
In “” or “” mode, use fresh air (“” indicator OFF) to reduce window fogging.
- ④ Recirculate cabin air (fresh air when OFF)
- ⑤ Air Conditioning ON/OFF (if equipped)  
Use fresh air to quickly cool interior, then change to recirculate for cooler air.

## Rear differential lock (if equipped)

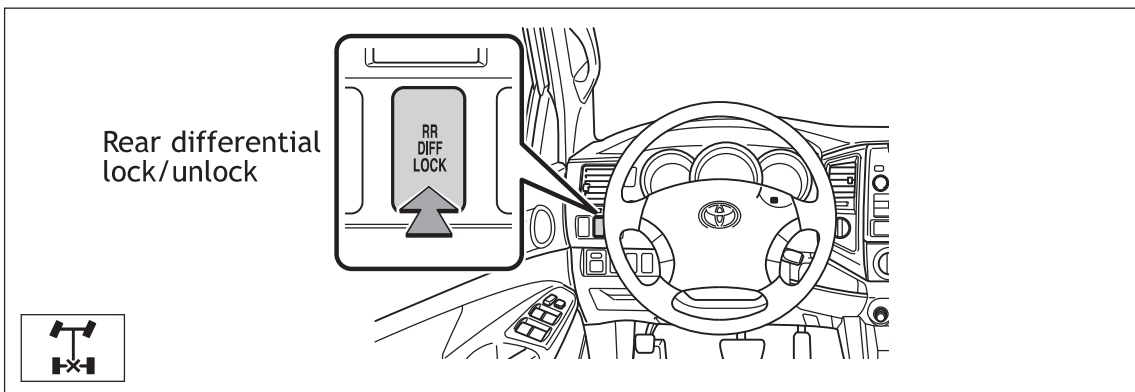 


Use **ONLY** when wheel spinning occurs in a ditch, or on slippery or unpaved surfaces. **DO NOT USE THE REAR DIFFERENTIAL LOCK IN CONDITIONS OTHER THAN THOSE SPECIFIED IN THE OWNER'S MANUAL. UNLOCK THE DIFFERENTIAL ONCE THE VEHICLE MOVES OUT OF THE TROUBLE SPOT.**

Refer to your *Owner's Manual* for complete details on this system before attempting to use it.




## Power outlets
 
### 12V DC

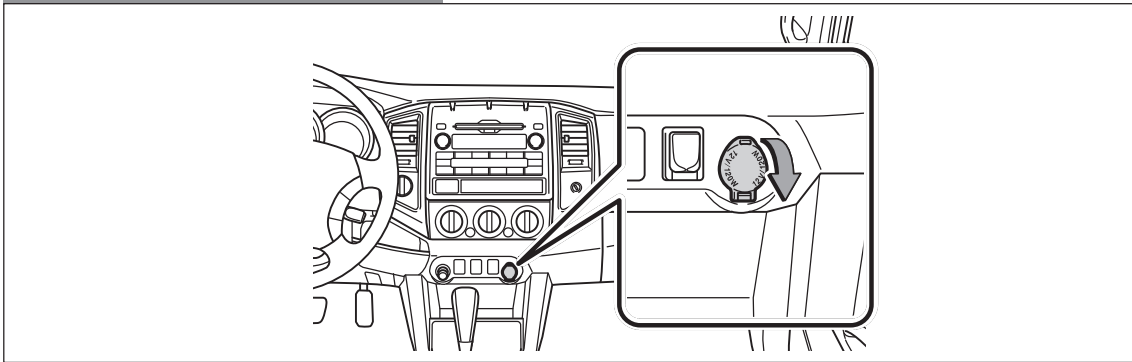

Key must be in the "ACC" or "ON" position to be used.

### 115V AC (if equipped)

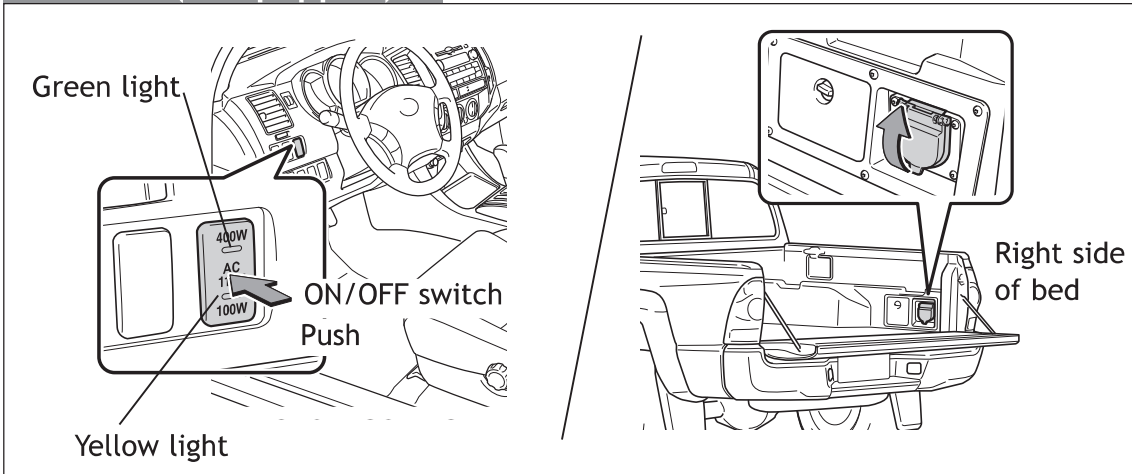 


The engine must be running for use.

Yellow Light Only Max Capacity 115V AC/100W

Green & Yellow Lights Max Capacity 115V AC/400W

Refer to the *Owner's Manual* for more details.


## VSC OFF switch

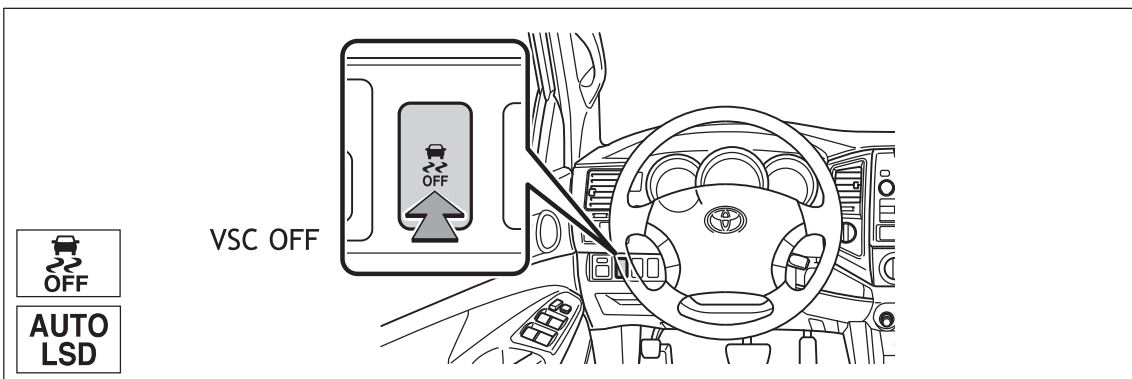 

The VSC OFF switch is used to switch between modes related to the TRAC, VSC and Auto LSD functions.

Refer to the *Owner's Manual* for more information.

## Telephone controls (Bluetooth®) (if equipped)

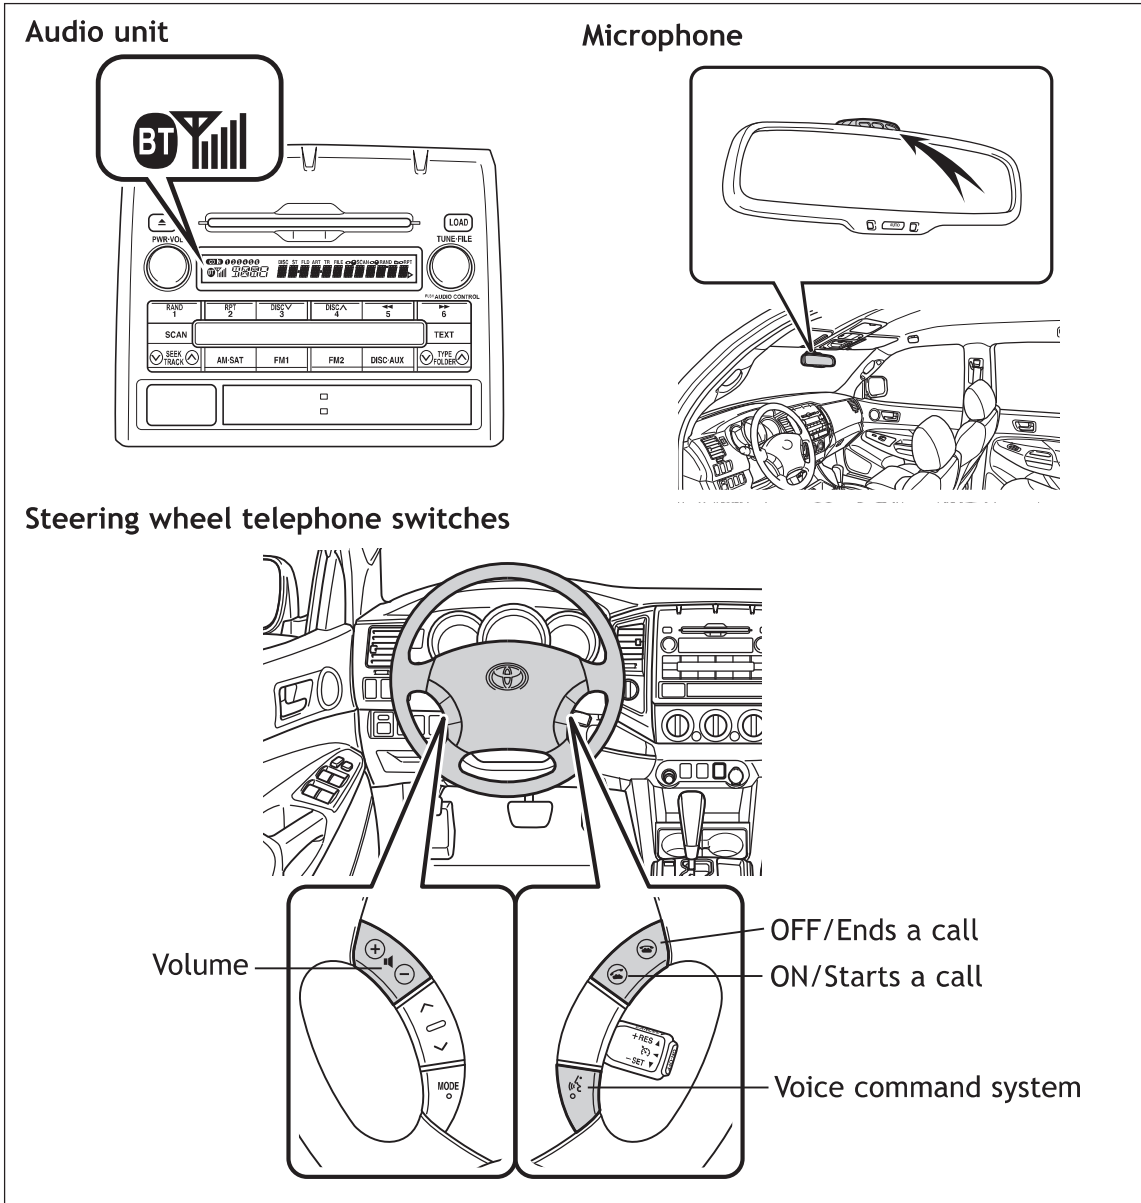 


Bluetooth® technology allows you to place or receive calls without taking your hands from the steering wheel or using a cable to connect the telephone and the system.

Refer to “Using the hands-free phone system (for cellular phone),” Section 3-3 in the *Owner’s Manual* for more details, or go to [Toyota.com](http://Toyota.com) and enter “Bluetooth” in the keyword search.

# SAFETY AND EMERGENCY FEATURES
 
## Seat belts

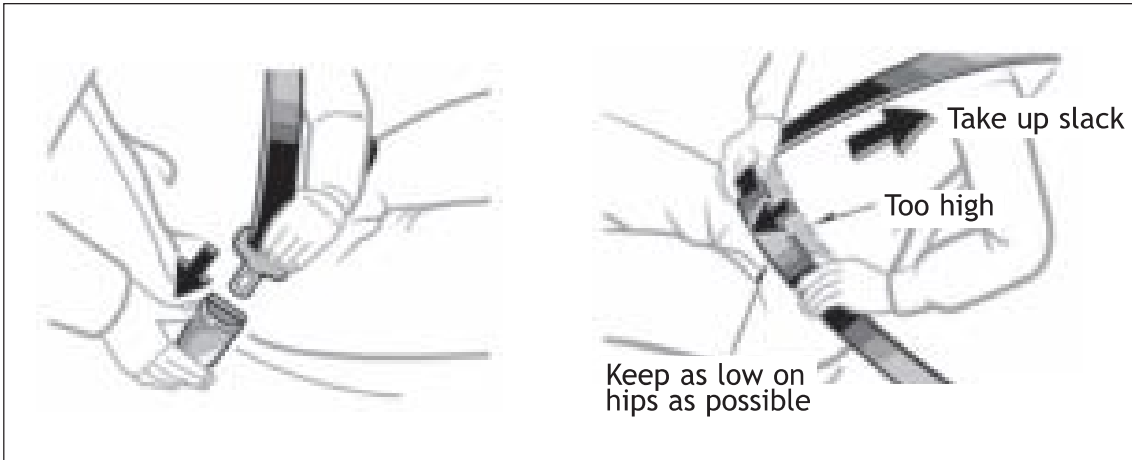


If belt is fully extended, then retracted even slightly, it cannot be re-extended beyond that point, unless fully retracted again. This feature is used to help hold child restraint systems securely.

To find more information about seat belts, and how to install a child restraint system, refer to the *Owner's Manual*.


## Seat belts-Shoulder belt anchor


 
## Door locks-Power (if equipped)

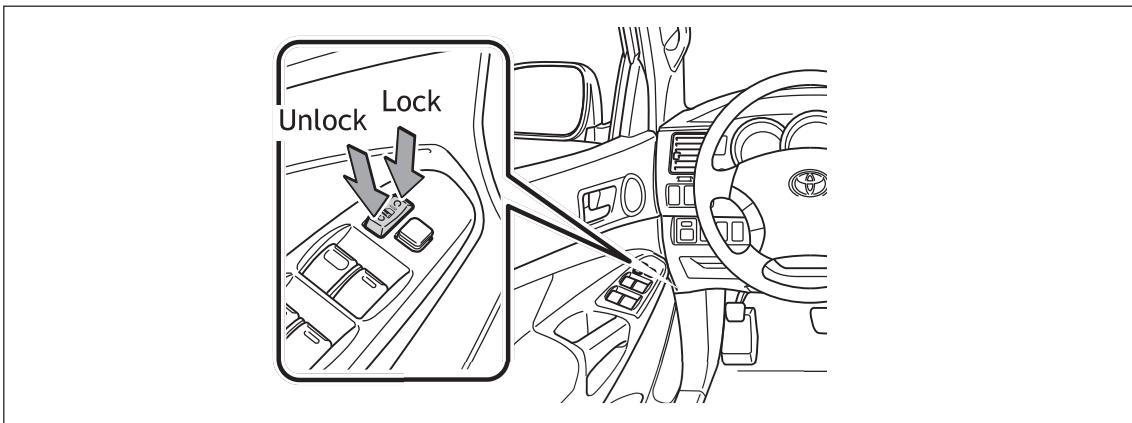

## Tire Pressure Monitoring (warning) System

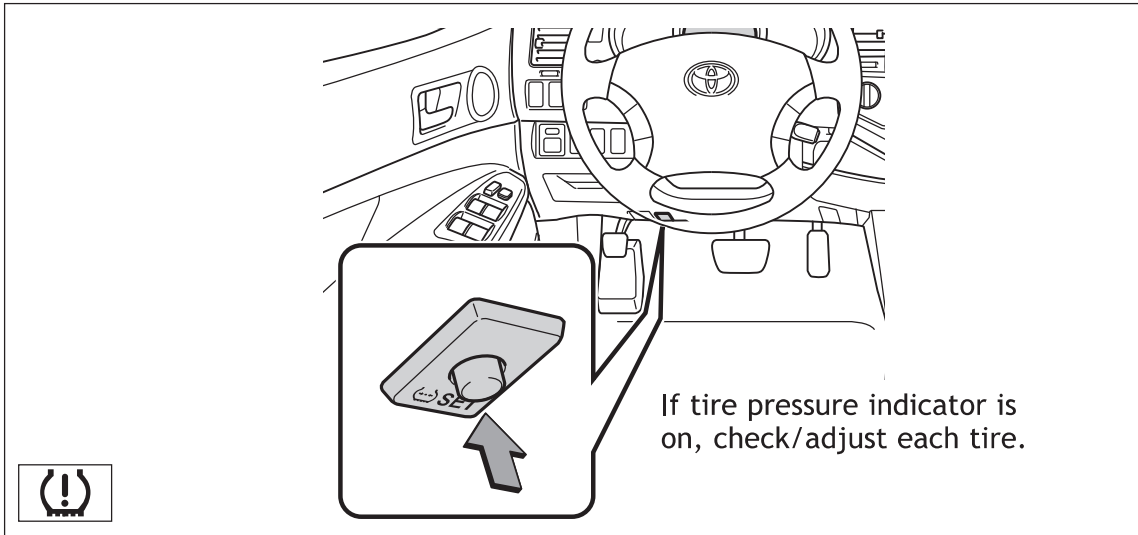 


After adjusting tire pressures, or after tires have been rotated or replaced, turn the ignition switch to "ON" and press and hold the "SET" button until indicator blinks three times. Let the vehicle sit for a few minutes to allow initialization to complete.

Refer to the load label on the door jamb or the *Owner's Manual* for tire inflation specifications.

If the tire pressure indicator flashes for more than 60 seconds and then remains on, take the vehicle to your local Toyota dealer.

## Doors-Child safety locks (double cab only)

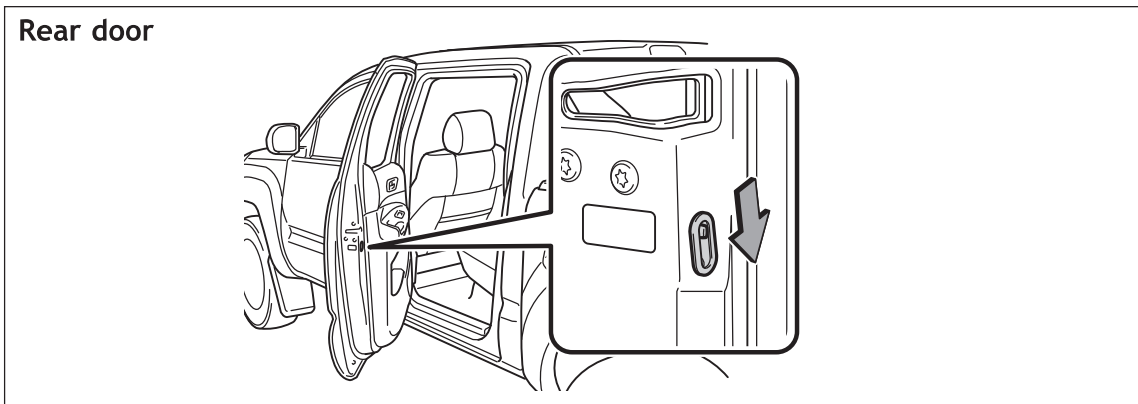 

Moving the lever to "LOCK" will allow the door to be opened only from the outside.